


How to import and export the annual maintenance plan

(Document)

When using the system, users can select and export according to their requirements: annual maintenance plan / annual maintenance plan (excluding irregular); if it is necessary to import the maintenance plan, the maintenance plan list is required to obtain the import template and select the import system.

1.Export the annual maintenance plan

Users log in the OLISS web side, click "Maintenance→Annual Maintenance" in order to enter the annual maintenance interface, click "Export" to select "Manage Annual Maintenance Plan" or "Annual Maintenance Plan (Irregular Items Not Included)" to export the annual maintenance plan form.

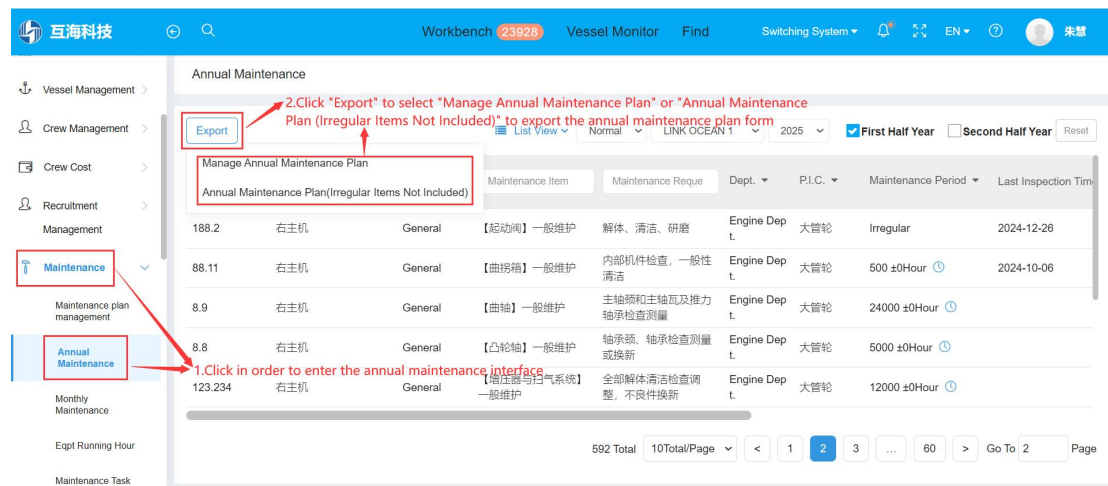

2.Import the annual maintenance plan

Users log in to the OLISS web side and click "Maintenance → Maintenance Plan Management" in order to enter the maintenance plan management interface, click "Add", select vessel and department, and click "Confirm" to enter the select maintenance plan interface. In the interface, according to the need to check the target maintenance item and click "Next Step" into the update maintenance plan interface, click "Data Initialization", in the maintenance plan import interface, first click "Export The Maintenance Plan List" for import data template, after maintenance plan information completed, then click "Import Maintenance Plan" import annual maintenance plan. After successful import, you can view the update type and update content in the update maintenance plan interface. After confirmation, click "Submit".

互海科技

Worshiper Maintenance Management Find Switching System EN 朱慧

1. Click in order to enter the maintenance plan management interface

2. Click "Add"

3. Select vessel, department information and click "Confirm"

Add

Vessel *
Please select

Dept. *
Please select

Confirm Cancel

Generation Settings

No. Maintenance Y... Vessel Name Dept

1 2025 LINK OCEAN 14 Eng

2 2025 ABLE SAILOR Eng

3 2024 ABLE SAILOR Engine Dept. 0

4 2024 ABLE SAILOR Deck Dept. 0

5 2023 ABLE SAILOR Engine Dept. 0

6 2023 ABLE SAILOR Deck Dept. 0

Partial Update Unsubmitted View Edit Delete

Whole Table Ma king

Whole Table Ma king

Whole Table Ma king

97 Total 10Total/Page < 1 2 3 ... 10 > Go To 1 Page

LINK OCEAN 14-Select Maintenance Plan

2025 First Half Year Second Half Year Search Reset

Mainl	Eqpt. Na	Maintenan...	Maintenance Item	Maintenance Reque	Dept.	P.I.C.	Mainten...	Last Inspe...	Jan / All	Feb / All	Mar / All	
106	船体建筑...	General	水密门、窗、舷窗、人孔盖、舷门等	检查锈蚀、损坏、变形及水密情况，活动部...	Deck Dept.	大副	3Months16 Day					<input type="checkbox"/>
107	船体建筑...	General	舱室的木门锁钩等	检查锈蚀、损坏腐蚀等情况，及时养护修理	Deck Dept.	大副	3Months16 Day					<input type="checkbox"/>
108	船体建筑...	General	压载水舱、淡水舱及燃油舱外表	检查锈蚀、水密损坏等情况	Deck Dept.	大副	12Months16 Day					<input type="checkbox"/>
109	船体建筑...	General	锚链舱	检查锈蚀、损坏情况，每季度清除积水污泥	Deck Dept.	大副	6Months16 Day					<input checked="" type="checkbox"/>
110	船体建筑...	General	信号桅、旗杆、雷达桅	检查锈蚀、损坏情况，每季度清除积水污泥	Deck Dept.	大副	3Months16 Day					<input checked="" type="checkbox"/>

54 Total 10Total/Page < 1 2 3 ... 6 > Go To 1 Page

4. According to the need to check the target maintenance item and click "Next Step"

Next Step

Maintenance Plan Import

5. Click "Data Initialization"

Export The Maintenance Plan List

6. First click "Export The Maintenance Plan List" for import data template

Import Maintenance Plan Import the maintenance plan template

Operation Log

NO.	Import Time	Import Status	Processing Sta...	Processing En...	Attachment	Operator	Operation
N/A							

Refresh

	A	B	C	D	E	F	G	H	I
1	Maintenance Index	Vessel Name*	Equipment No.*	Equipment Name*	Maintenance No.*	Maintenance Position	Maintenance Item*	Period Type*	Pe
2	1	825251 LINK OCEAN 14	HS-0000-000-001	船体建筑及舱室	109		锚链舱	Month	6
3	2	825252 LINK OCEAN 14	HS-0000-000-001	船体建筑及舱室	110		信号桅、旗杆、雷达桅	Month	3
4									
5									
6									
7									
8									

7. Modify the maintenance plan information (with * required)

AddData InitializationSelect Maintenance Plan

MainlUpdate TypeEqpt. NaMainl

109Update船体建筑...Gene

110Normal船体建筑...Gene

Export The Maintenance Plan ListExport the plan list, modify and import it, so as to batch update.

Import Maintenance Plan

Import the maintenance plan template

8.After maintenance plan information completed, then click "Import Maintenance Plan" import the file

Operation Log

NO.	Import Time	Import Status	Processing Sta...	Processing En...	Attachment	Operator	Operation
1	2025-02-14 11:56:00	done	2025-02-14 11:56:00	2025-02-14 11:56:00		朱慧	<div>View Details</div>

Click to view the import details

LINK OCEAN 14-Deck Dept.2025Update Maintenance Plan

AddData InitializationSelect Maintenance Plan

All InvalidRestore-allReset

Mainl	Update Type	Eqpt. Na	Maintenance Type	Update Content	Maintenance Item	Maintenance Request	P.I.C.	Maintena...	Jan	F	Invalidate This Page
109	Update	船体建筑...	General	Modified必须上传附件	锚链舱	检查锈蚀、损坏情况、每季度清除积水污泥	大副	6Month±16 Day			<div>View Edit Delete Invalid</div>
110	Normal	船体建筑...	General		信号桅、旗杆、雷达桅	检查锈蚀、损坏情况、每季度清除积水污泥	大副	3Month±16 Day	15		<div>View Edit Delete Invalid</div>

2 Total | 10Total/Page

9、After successful import, you can view the update type and update content in the update maintenance plan interface. After confirmation, click "Submit"

SaveSubmitCancel