

How to view and export vessel spare parts Stock in and out Statistics details (documents)

Users log in to the OLISS Web side , click to enter the "Stock Management → Vessel Stock → Spare Parts Stock" interface. click "Stock In & Out Statistics", click "Export" on the Stock in and Out Statistics interface, and choose to export by "Equipment Group" or "Storage Location Group" according to their needs.

互海科技 Workbench 00749 Vessel Monitor Find Switching System EN 孙红梅

Stock Management Vessel Stock

1. Click to enter the vessel stock interface in turn

2. Click "Stock In & Out Statistics"

3. In the stock in & out statistics interface, click "Export", and choose to export by "Equipment Group" or by "Storage Location Group" according to your needs

Export

Eqpt. Group	Spare Part Code/Specifications/Drawing No.	Position No.	Component Info.	Unit	Current Stock	Stock-in	Stock-out
1. Pfg	75576	1	Eqpt. Name:coco412;Eqpt. Type:coco412;Manufacturer:不明;Brand Series:Component Na...	2	0	0	0
2. O型圈	无		Eqpt. Name:O型圈;Eqpt. Type:丁腈橡胶;Manufacturer:不明;Brand Series:Component Na...	个	3	0	0