

# How to add oil data to the basic database (document)

To log in to the OLISS Web side , go to "Settings → Basic Data → Oil" interface, and follow these steps 1-7:

- 1、 Click to enter the oil management interface;
- 2、 Click 'Add' to open the interface on the right;
- 3、 Fill in the relevant information (required fields marked with \*);
- 4、 Click to add fuel parameter details.
- 5、 Click 'Confirm' to submit directly; no usage scope is set for now.
- 6、 Click 'Submit and Configure Scope'
- 7、 On the scope of application interface, click the 'Purpose' dropdown button, select the fuel purpose, then click 'Submit'!

互海科技 Workbench 20720

Settings Basic Data Oil

2. Click "Add" to open the interface on the right

No.	Oil Name	Specification	Unit	Applicable Vessel
1	主机滑油	220	KG	LINK OCEAN 1, LINK OCEAN 14, CHEAL OCEAN LINK 1, Janhaihao, nice, Xin
2	低温抗磨液压油-LH V100	209L/桶	桶	nbhny1, LINK OCEAN 1, LINK OCEAN uhaiyun1, nuhaiyun, huhai3, LUNG MUI
3	低温抗磨液压油-LH V15	209L/桶	桶	
4	康明斯机油蓝宝尊C F-15W40	18L/桶	桶	
5	昆仑CH-4 15W-40 柴油机油	16kg/20L/桶	桶	
6	昆仑DCA5040船用气缸油	910kg/桶	桶	
7	昆仑DCA5070H船用气缸油	1000L/930kg/桶	桶	
8	昆仑DCA5070H船用气缸油 170kg/桶	170kg/桶	桶	OCEAN 1
9	昆仑DCB4030H中速筒状活塞柴油机油	910kg/桶	桶	
10	昆仑DCB4030H中速筒状活塞柴油机油 170kg/桶	170kg/桶	桶	
11	昆仑DCC4008船用系统油	890kg/桶	桶	

1. Click to enter the oil management interface

4. Click to add fuel parameter details

3. Fill in the relevant information ( required fields marked with \* )

5. Click "Confirm" to submit directly; no usage scope is set for now

6. Click "Submit and Configure Application Scope"

Submit and Configure Application Scope Confirm Cancel



Oil Name: 康明斯新一代机油CF-20W50 200L/桶

Specification: 200L/桶

Oil Type: Grease

Manufacturer: 康明斯机油

Brand Series: 康明斯

Unit: 桶

Vessel	Usage	Unit in Oil Consumption Report	Conversion Ratio
	Fuel-LSFO	ton	1 桶 = <input type="text" value="Please enter"/> ton
LINK OCEAN 1	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
AMY ANGEL	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
LINK OCEAN 14	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
huhai3	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
huhaiyun	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
huhaiyun1	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
LUNG MUN	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
ABLE SAILOR	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
lanhaihao	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
CHEMICAL OCEAN LINK 1	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
nice	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton
STAR	Fuel-LSFO	ton	1 桶 = <input type="text" value="1"/> ton

7、On the scope of application interface, click the "Purpose" dropdown button, select the fuel purpose, then click "Submit" ←

Submit

Cancel

### Note:

Due to the oil-related ship reports, where the unit for fuel oil in system reports is tons and the unit for lubricating oils is liters, attention should be paid to unit conversion when adding oil data.