
## How to modify equipment component and spare parts on the

## web side (documents)

Users can log in to the OLISS Web side and follow the steps 1-7 below in the "Setting - > Basic Data - > Spare Parts" interface:

## 1. Modify component information

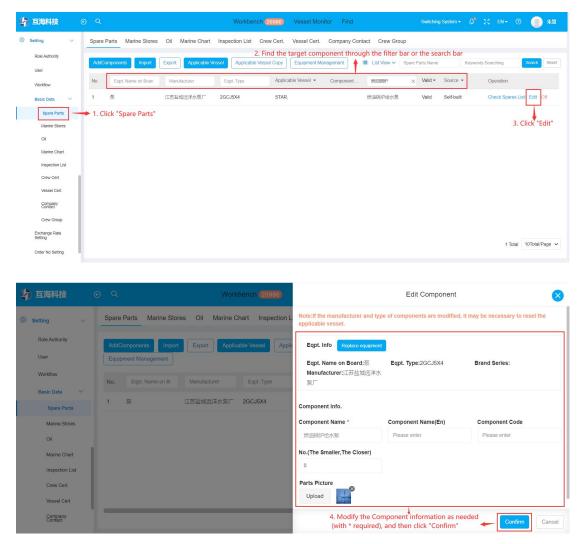

2. Modify spare parts information

⑤ 互海科技	) Q. Workbench 20996) Vessel Monitor Find Switching System • 🗘 💥 EN • 🕐 🌍 🗱
🕸 Setting 🗸 🗸	Spare Parts Marine Stores Oil Marine Chart Inspection List Crew Cert. Vessel Cert. Company Contact Crew Group
Role Authority	AddComponents Import Export Applicable Vessel Applicable Vessel Copy III List View ~ Spare Parts Name
User	Equipment Management Keywords Searching Reset
Workflow	No. Eqpt. Name on B Manufacturer Eqpt. Type Applicable Vessel ▼ Componen 挑結時時 × Valid ▼ Operation
Basic Data 🛛 🗠	1 泵 江苏盐城远洋水泵厂 2GCJ5X4 STAR, 燃油锅炉给水泵 Valid Check Spares List Edit Off
Spare Parts	
Marine Stores	5. Click "Check Spare Parts List"
Oil	
Marine Chart	
Inspection List	
Crew Cert.	
Vessel Cert.	
Company	
	1 ToTotuPane V

Spare Parts List									>
Add Spares						6. Click "	Edit" on the right s	side of the specific s	spare parts
Positior	Spare Part Code/Sj	Spare Parts Name	Drawing No.	Unit	Standard Qu	Valid 🔻	Source 👻	Operation	
999	2GCJ5X4	燃油锅炉给水泵		组	1	Valid	Self-built	Edit Off	
1	9797	测试979797		7	1	Valid	Self-built	Edit Off	

2 Total 10Total/Page 🗸

			Spar	re P	Spar	es Edit			
Add Spares					Note: The data referenced from IMPA Database cannot be modified! This spare part information will be referenced in historical documents, please modify it carefully!				
			Drawing No.	Unit	Position No.(Position No. on the drawing of spare parts book) "	No.(The Smaller,The Closer) *			
999	2GCJ5X4	燃油锅炉给水泵		组	999	0			
	9797	别过979797		7	Spare Parts Name *	Spare Parts Name(En)			
	9/9/	3918/979797			然出锅炉给水泵	Please enter			
					Code/Specification *	Co.Own Code			
					2GCJ5X4	987654321			
					Unit "	Unit(EN)			
					相	Please enter			
					Standard Quantity *	Drawing No.			
					1	Please enter			
					Spare Parts Type				
					Common 🗸				
					Description	Description(En)			
					Please enter	Please enter			
					0 / 500	07500			
					Upload				
					7. In the spare parts modification interfa needed (with * required), and finally clic				

## Note:

1.Data referenced from the standard library cannot be modified.

2.After modifying the information of used parts and spare parts, the associated procurement, inventory, and other information will also change accordingly. Please modify with caution.