

# Web端如何配置船型检验周期（文档）

用户登录互海通Web端，依次点击“船舶管理→船舶检验”，在船舶检验界面点击“配置船型检验参数”，选择具体船型后，点击“编辑”，根据需要填写检查周期、检验内容、前允差、后允差后，点击左上方的“保存”。

The screenshot shows the 'Ship Management' section of the 'Ship Inspection' page. A red box highlights the 'Edit' button in the top right corner of the main table. Another red box highlights the 'Edit' button in the sub-table for the 'General Cargo Ship' category.

**Step 1:** Click 'Ship Management - Ship Inspection' (highlighted by a red arrow).

**Step 2:** Click 'Configure Ship Type Inspection Parameters' (highlighted by a red box).

**Step 3:** Select the ship type and click 'Edit' (highlighted by a red box).

**Step 4:** Fill in the inspection parameters and click 'Save' (highlighted by a red box).

| # | Check Category             | Inspection Period (Month) | Inspection Content                   | Pre-tolerance (Days) | Post-tolerance (Days) |
|---|----------------------------|---------------------------|--------------------------------------|----------------------|-----------------------|
| 1 | Annual Inspection          | 3                         | Check if normal, external inspection | 4                    | 5                     |
| 2 | Intermediate Inspection    | 6                         | Check if normal, external inspection | 6                    | 5                     |
| 3 | Conversion Inspection      | 1                         | Check if normal, external inspection | 5                    | 5                     |
| 4 | Bottom External Inspection | 12                        | External inspection                  | 5                    | 5                     |
| 5 | Screw/Shaft Inspection     | 24                        | Check if normal, external inspection | 5                    | 5                     |
| 6 | Boiler Inspection          | 6                         | Check if normal, external inspection | 5                    | 5                     |

