

How to add vessel equipment (single addition, batch export and import)

Users can log in to the website of OLISS, and operate in "Vessel Management → Equipment List" interface according to the following steps 1-3':

互海科技

Workbench 28854 Vessel Monitor Find

Switching System EN

孙红陶

BI Dashboard

Vessel Management

Vessel Info

Cert. Management

Technical Files

Equipment List

Vessel Inspection

Hidden Danger Screening

Regular Inspection

Equipment List

Please enter

LINK OCEAN 1

LINK OCEAN 14

ABLE SAILOR

自测1号

3. Click to add a single vessel

2. Select the vessel

4. Click "Export" to export the equipment list(template). After improving the relevant information , click "Import" to import the equipment information into the system in batches.

1. Click in turn to enter the interface of "Equipment List"

No.	Eqpt. Name	Subsystem	Eqpt No.	Eqpt Type	Equipment Level	Manufacture	Manufacture Date	Equipment Property	Operation
1	测试空压机名称	Starting Air System	01					Common	Edit Delete
2	消防员装备	Fire Extinguisher System	02					Critical	Edit Delete
3	泡沫灭火器	Fire Fighting Equipment Supply	03					Critical	Edit Delete
4	启动空气附件	Starting Air System	A01					Critical	Edit Delete
5	空气系统	Air System	AS-0000-000-001		11				Edit Delete

LINK OCEAN 1Equipment List

You can quickly find it through the filter bar

Select Main System Select Subsystem Select Eqpt. Group Eqpt. Name Search Reset

No.	CWBT Eqpt No.	CWBT Eqpt. Name	Eqpt. Group	Subsystem	Main System	Operation
1	AS-0000-000	Air System	Air System	Air System	Air System	+
2	AS-0100-000	Starting Air System	Starting Air System	Starting Air System	Air System	+
3	AS-0101-000	Starting Air Pipe System	Starting Air Pipe System	Starting Air System	Air System	+
4	AS-0101-078	Starting Air Accessories	Starting Air Pipe System	Starting Air System	Air System	+
5	AS-0101-148	Starting Air Pipe	Starting Air Pipe System	Starting Air System	Air System	+
6	AS-0101-149	Starting Air Valve Parts	Starting Air Pipe System	Starting Air System	Air System	+

3. Select the system category to which the equipment belongs, and click "+" to add the equipment

Add Vessel Eqpt.



Main System: Air System

Subsystem: Starting Air System

Eqpt.Group: Starting Air System

Eqpt No. *

AS-0100-000-001

Eqpt. Name *

Starting Air System

Manufacturer

Please enter

Eqpt Type

Please enter

Equipment Level

Please enter

Drawing No.

Please enter

Manufacture Date

Please select



Factory No.

Please enter

Equipment Property

Please select



Remarks

Please enter

Upload

No Added Eqpt.

3'. Serial numbers are automatically arranged in sequence. Users can customize the last the code and the name of the equipment, fill in the information such as the manufacturer, equipment model and the attachment as required, and finally click "Confirm"

Confirm

Cancel