
How to execute stock-in/stock-out operations quickly in stock query interface

Users can log in to the website of OLSaaS, and operate in "Stock Management → Vessel Stock → Stock Query" interface according to the following steps 1-3':

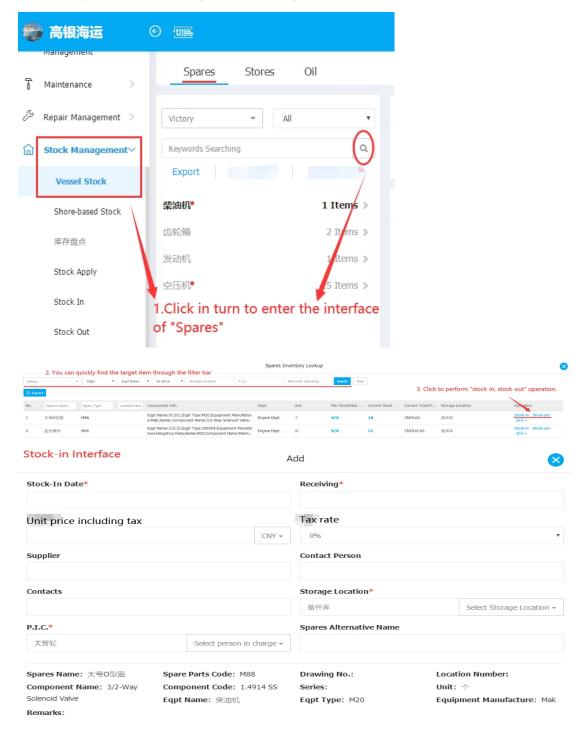

4.Fill in the stock-in information(Items with * are required)according to the actual situation, and then click "Confirm"





| Spares Name: 大号O型圈 Equipment Info.: 柴油机 / M20 / Mak / 3/ | | | Spare Parts Code: M88 2-Way Solenoid Valve | | Location Number: 999 | |
|---|---------------|---------|---|--------------|----------------------|---------|
| No. | Stock-in Date | Price | Stock Info.Description | Qty In Stock | Stock-out Qty | Remarks |
| 1 | 2022-04-10 | CNY0.00 | P.I.C.:大管轮 Storage Location:备件库 | 2(个) | | |
| 2 | 2022-11-28 | CNY0.00 | P.I.C.:大管轮 Storage Location:备件库 | 8(个) | | |

5. Fill in the stock-out quantity and remarks(if any)according to the actual situation, and then click "Confirm" to add stock-out items successfully.



Note:

These are the operation steps of quick stock-in/stock-out in spare parts inventory query interface. In addition, you can also perform stock-in/stock-out in the interface of "Vessel Stock"→ Stores Stock Query, or "Shore-based Stock"→ Spares/Stores Stock Query.