
Stock-out Instructions

Users can log in to the website of OLSaaS, and operate in "Stock Management" \rightarrow Stock-out Management" interface according to the following steps 1-9:

(Take the operation of "Consume-Spare Parts" as an example)

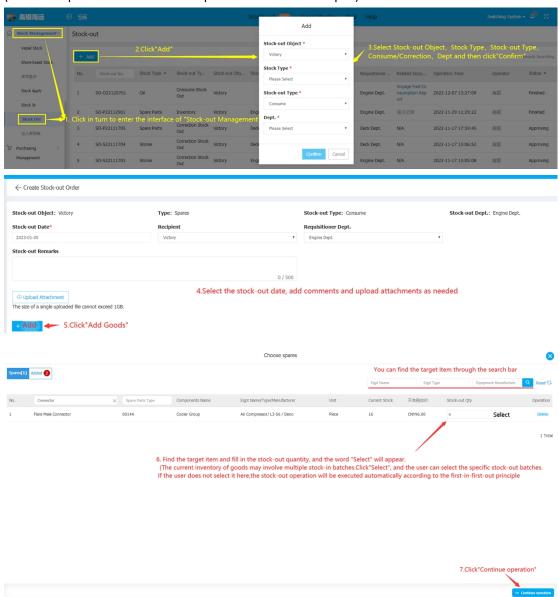



Spares Name: Flare Male Connector Equipment Info.: 空压机 / L3-56 / Deno /			Spare Parts Code: 0014A Cooler Group		Location Number: 1	
No.	Stock-in Date	不含税单价	Stock Info.Description	Qty In Stock	Stock-out Qty	Remarks
Z	2022-10-27	CNY6.00	P.I.C.:大管轮 Storage Location:备件间 Supplier: ①	4(Piece)	4	
~	2022-10-08	CNY6.00	P.I.C.:大管轮 Storage Location:备件库 Supplier: ①	12(Piece)	2	

The first batch in storage will be automatically ticked. Users can tick the stock-out batches as needed here.

If you do not select it here, the stock-out operation will be executed automatically according to the first-in-first-out principle

Click "Confirm" if a specific stock-out batch is selected.

