

How to switch the tree view of the monthly maintenance (Document)

Users log in to the OLISS web side and click "Maintenance → Monthly Maintenance" in order to enter the monthly maintenance interface, the current interface is "List View", click the arrow on the right and select "Tree View". In the tree view, users can click to switch between displaying maintenance tasks by responsible person or equipment and click on the specific responsible person/equipment to display the maintenance tasks.

2.The current interface is "List View", click the arrow on the right and select "Tree View"

1.Click in order to enter the monthly maintenance interface

Maintenanc	ID	Eqpt. Name	Maintenance It	Maintenance R	Responsible D...	P.I.C.	Maintenance Peri...	Operation
88.11	3029101	右主机	【曲拐轴】一般维护 内部机件检查, 一般性清洁	Engine Dept.	大管轮		500 ±0 Hour	Execute Delay Request
2025021801	3242648	测试空压机名称	空压机清洁、保养	Engine Dept.	二管轮		Temporary	Execute
188.2	3242647	右主机	【起动机】一般维护 解体、清洁、研磨	Engine Dept.	大管轮		Irregular	Execute
188.2	3242649	右主机	【起动机】一般维护 解体、清洁、研磨	Engine Dept.	大管轮		Irregular	Accept

The current ship has added 4 scheduled maintenance tasks for the engine department

Click to switch between displaying maintenance tasks by responsible person or equipment

3. Click on the specific responsible person/equipment to display the maintenance tasks

Maintenanc	ID	Eqpt. Name	Maintenance It	Maintenance R	Maintenance Peri...	Operation
7.1	3029078	通讯及广播系统	MF/HF组合电台 21 82KHZ值班机 V...	按规定进行检查 清洁维护,开航前试...	1Month±16 Day	Execute Delay Request
7.2	3029079	通讯及广播系统	通导设备天线	检查腐蚀损坏及绝缘是否良好 (开...	1Month±16 Day	Execute Delay Request
7.3	3029080	通讯及广播系统	电台蓄电池	检查测量电流是否处于使用范围内...	1Month±16 Day	Execute Delay Request

The current ship has added 4 scheduled maintenance tasks for the engine department and 0 scheduled maintenance tasks for the deck department this month.