How to set parameters of Shore Power Use

Users can log in to the website of OLSaaS, and operate in "Vessel Report \rightarrow Shore Power Use \rightarrow Shore Power Use Record" interface according to the following steps 1-6:

Management		UBS-					Workbench (17470)	Vessel Monitor	Find H	Help
	_	Shore Power Us	se Record Sho	ore Power Use	e Statistics					
Vessel Report	t ~									
Movement Rep	port >	韋 Parameter Setting) <mark>ti ali c</mark>	Export 2	2.Click to c	omplete P	arameter Setting] .		
Oil Consumpti Report	ion	Vessel Name 👻	Voyage ID	Port of Call	Power	Supply Time		Power Supply	y Ho Sho	re Power Consu
Voyage Oil Consumption	Report	LINK OCEAN 1	v1291	江阴	(i) No	shore power w	as used this time.			
Voyage Work	Report	LINK OCEAN 1	122	江阴	2022-:	11-17 00:00 - 2	022-11-18 00:00	24	113	
Shore Power	r ~ \	LINK OCEAN 1	11	江阴	2022-0	07-26 00:00 - 2	022-07-26 00:00	0	111	1
Shore Po Usage R	ower	TINK OCEAN 1	2022 Jrn to enter"S	江阴 hore Powe			022-07-25 00:00	0	100	0
obage n		LINK OCEAN 1	Victory666	江阴港			022-06-24 13:00	55	300	0
Vessel 👻	Туре	Refit Time	Electrical	Power Vol	Power Fre	Meter Mul	Power Receiving F	A/E Oil Consumption .	Convers	sic Operation
Hide the rele	-	er multiplying power and f berthing/departure 1		_			-	4. Click to e	edit the	paramete
Vessel 👻	Туре		Electrical	Power Vol	Power Fre	Meter Mul	Power Receiving F	A/E Oil Consumption .	Convers	sic Operation
1	Refit	2021-05-01	е			1	220V电压, 60HZ	195	100%	Edit
LINK OCEAN	Factory Con	nfigur	Low Pressur e			1	待增容	230	100%	Edit
	ation									
14		ifigur	Low Pressur e			1		286	99%	Edit
14 蓝海号(高银) OCEAN 1	ation Factory Con	ifigur	Low Pressur		No power recei		ease complete it as soo		99%	Edit Add
14 蓝海号(高银)	ation Factory Con	nîgur	Low Pressur		No power recei		ease complete it as soo			Add
14 蓝海号(高银)	ation Factory Con	figur	Low Pressur		No power recei	ving facility, pl	ease complete it as soo	n as possible ~		Add
14 蓝海号(高银) OCEAN 1	ation Factory Con ation	ifigur berthing/departure t	Low Pressur e		Parameter S	ving facility, pl	ease complete it as soo	n as possible ~		Add
14 蓝海号(高银) OCEAN 1 Hilde the rele	ation Factory Con ation		Low Pressur e		Parameter S	ving facility, pl		n as possible ~ 5. Click to s	set the p	Add
14 蓝海号(高根) OCEAN 1 Hide the rele /essel マ INK OCEAN	ation Factory Con ation	berthing/departure t	Low Pressur e ime on all pages ①	Reduce	Parameter S ad Model ③	ving facility, pl		n as possible ~ 5. Click to s	set the p	Add parameter
14 蓝海号(高银) OCEAN 1	ation Factory Con ation evant fields of Type	berthing/departure t Refit Time 2021-05-01	Low Pressur e ime on all pages ③ Electrical Low Pressur	Reduce	Parameter S ad Model ③	ving facility, pi	Power Receiving F	n as possible ~ 5. Click to s	set the p	Add Add Add Add Add Add Add Add

6. After completing the necessary information, click "Save" to set the parameters successfully.

Meter M

*A/E Oil Consumptio

Save Cancel

Conve

Plea: 🔻

Low V Plea: V

OCEAN 1

Please sel 🔻